

# Grill & Oven Cleaner

Grill & Oven Cleaner is designed to eliminate the use of abrasives in the cleaning process. Its powerful grease removing components quickly pick up burned on soils, cleaning all surfaces completely. Regular use of this ready-to-use product will eliminate the cause of rancid odors and stale taste.

## Specifications

|                           |                           |
|---------------------------|---------------------------|
| <b>Color</b>              | Amber                     |
| <b>Scent/Odor</b>         | None added                |
| <b>Character</b>          | Clear, non-viscous liquid |
| <b>Foam</b>               | Low                       |
| <b>pH Use Dilution</b>    | > 13.0                    |
| <b>Phosphorus Content</b> | 0.0%                      |
| <b>Approvals</b>          | N/A                       |



## Pack Sizes

101100658 4/1 gallon case

## Directions For Use

### FOR GRILL CLEANING:

1. Scrape heavy debris from grill surface.
2. Raise or lower temperature of grill to 150° - 180°F.
3. Spray or pour Grill & Oven Cleaner on entire grill surface. Do not dilute.
4. IMMEDIATELY wipe grill with cloth or non-abrasive pad.
5. Rinse with a mild acid (vinegar) solution.
6. Follow with a water rinse.
7. Reprocess grill with cooking oils to prevent from sticking.

### FOR OVEN CLEANING:

1. Raise or lower temperature of oven to 150° - 180°F.
2. Spray or wipe on Grill & Oven Cleaner. (WARNING: DO NOT spray into heated oven over recommended temperature.)
3. Wipe clean with damp cloth or sponge. Rinse with a mild acid (vinegar) solution.

## Safety Reminder

*Read and understand the label and Safety Data Sheet (SDS). These provide a description of hazards, precautions, personal protective equipment, first aid, 24 Hour Emergency lines, storage data and other safe handling information. The SDS is provided with each container shipped. It is also available on our website or from the distributor.*

